


User's Guide

MIIC-102 / PCIe / PCI / PC-CARD / ISA

I²C Bus Monitor Plus

Version 2.4

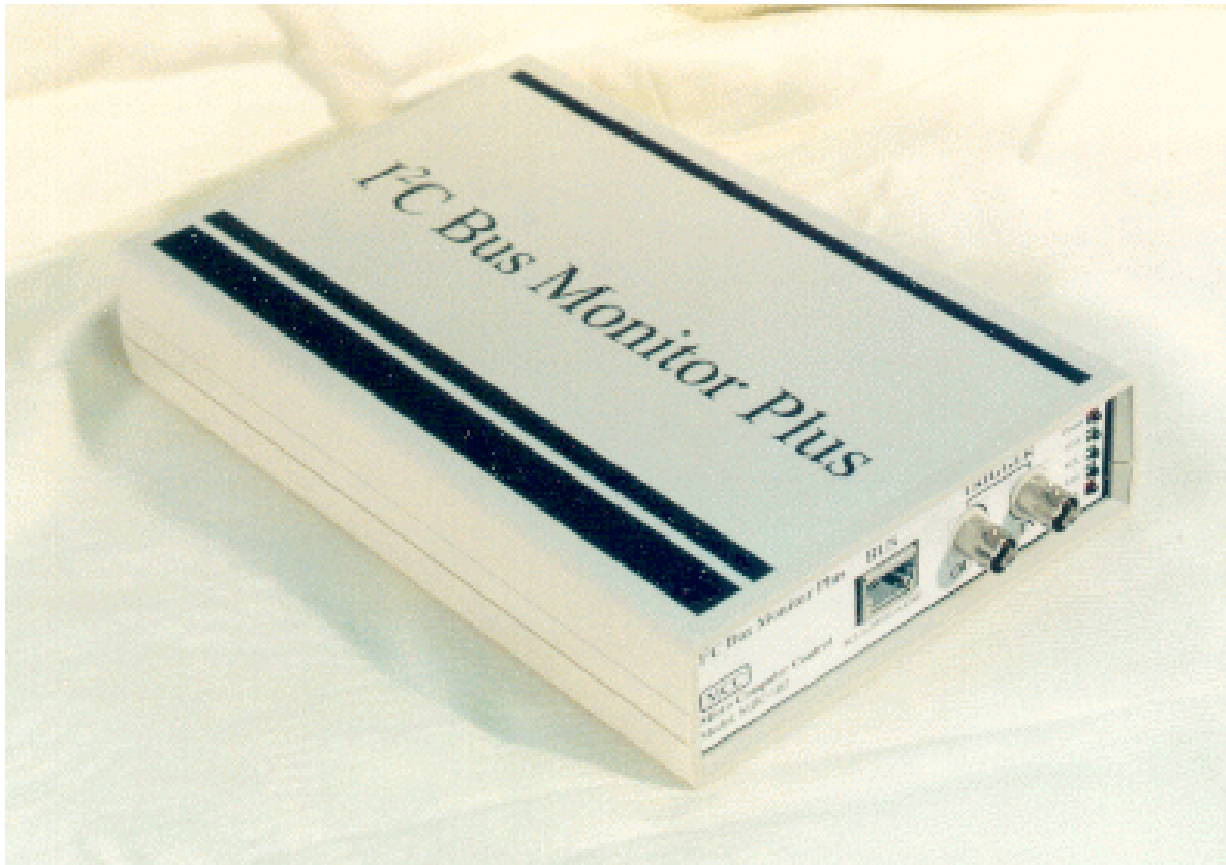

Micro Computer Control Corporation
www.mcc-us.com

The MCC I²C Bus Monitor Plus™ (#MIIC-102) I²C Bus Monitor is a laboratory grade instrument that allows a Windows PC to monitor, analyze, log, and display I²C Bus and derived bus protocol activity.

What is new for Version 2.4:

- **Windows 7 x64** - Add Windows 7 x64 support.
- **PCI Express (PCIe) Interface** - Add PCI Express (PCIe) Interface support.

What is new for Version 2.3:

- **Match/Non-Match Message Data Filter** - Message data filter can now display matching, or non-matching, message data.
- **Slave Address Map R/W/A/N Filter** - Read, Write, Acknowledgment, and Negative Acknowledgment Slave Address Display Filter Options are now supported.
- **Slave Address Map Activity Monitor** - Slave Address message activity is now visible even if the Slave Address is disabled.
- **Message Display File** - All messages displayed in the main message window can now be logged to an ASCII text file.
- **Binary Data Display Option** - The Binary display of message data is now supported.
- **Comma-Delimited Display Option** - Comma-Delimited display of message data is now supported. Used with the Message Display File feature (above) to generate spreadsheet compatible import files for additional analysis.
- **Auto-Retry** - Auto-retry on pod communication loss (CE Support).

This user's guide describes the installation and operation of the I²C Bus Monitor Plus hardware and software.

I²C is a trademark of NXP (Philips) Corporation.

13-DEC-2010

Copyright© 2010 by Micro Computer Control Corporation. All rights are reserved. No part of this publication may be reproduced by any means without the prior written permission of Micro Computer Control Corporation, PO Box 275, Hopewell, New Jersey 08525 USA.

DISCLAIMER: Micro Computer Control Corporation makes no representations or warranties with respect to the contents hereof and specifically disclaims any implied warranties of merchantability or fitness for any particular purpose. Further, Micro Computer Control Corporation reserves the right to revise the product described in this publication and to make changes from time to time in the content hereof without the obligation to notify any person of such revisions or changes.

WARNING - Life Support Applications: MCC products are not designed for use in life support appliances, devices, or systems where the malfunction of the product can reasonably be expected to result in a personal injury.

WARNING - Radio Frequency Emissions: This equipment can radiate levels of radio frequency energy that may cause interference to communications equipment. Operation of this equipment may cause interference with radio, television, or other communications equipment. The user is responsible for correcting such interference at the expense of the user.

WARNING - Electrostatic Discharge (ESD) Precautions: Any damage caused by Electrostatic Discharge (ESD) through inadequate earth grounding is NOT covered under the warranty of this product. See the “Electrostatic (ESD) Precautions” section of this guide for more information.

Printed in the United States of America

Table of Contents

System Requirements	1
System Components	1
 Introduction	 3
Features	3
I ² C Bus Monitor Plus Software	4
 Installation	 5
ESD (Electrostatic Discharge) Precautions	5
Host Computer Grounding	6
Grounding Solutions	6
Installation - PCI Express (PCIe) Interface Card Version ..	7
1. Installing the PCIe Card Driver Software	8
2. Installing the PCIe Card and Driver	8
3. Configuring the PCIe Card	9
Installation - PCI Interface Card Version	9
1. Installing the PCI Card Driver Software	10
2. Installing the PCI Card and Driver	10
3. Configuring the PCI Card	11
Installation - PC-CARD Interface Version	11
1. Installing the PC-CARD Driver Software	12
2. Installing the PC-CARD and Driver	12
3. Configuring the PC-CARD	12
Installation - ISA Interface Card Version	13
1. Installing the ISA Card Configuration Software	13
2. Setting ISA Card Address	14
3. Installing the ISA Card	15
4. Configuring the ISA Card	15
Installing - I²C Bus Monitor Plus Software	16
Installing - Distribution Edition	16
Installing - Demonstration/Viewer Edition	16
Connecting Your PC to the Pod	17

Connecting to the System Under Test	18
I ² C Bus Port	18
Trigger In Port	19
Connecting to External Test Equipment	19
Trigger Out Port	20
Auxiliary Port	20
Starting the I²C Bus Monitor Plus Software	22
Viewing Sample Log Files	22
Viewing Live Messages	22
Program Controls	23
Trace Controls:	23
Trace	23
More	24
Halt	24
Clear	24
Display [Options]	24
None	24
Start, Stop, Ack, NAck and R/W	24
Start Time, Byte Time, and Bit Rate	24
Filtering	24
Abs Time	24
Relative Time Mode	24
Absolute Time Mode	25
Data Protocols	25
ASCII	25
HEX	25
BIN	25
CD	25
SBS	25
Pull-Down Menu Controls:	26
File Print Setup	26
File Print	26

File Exit	26
Setup Interface Board	26
Setup Logic Level Threshold	27
Setup Trace Control	27
Setup Trigger Out	27
Setup Enable Bit Timing	29
Setup Select SBS Revision	29
Setup Open Log File for Write	30
Setup Open Log File for Read	30
Setup Open Display File for Write	30
Setup Initialize External Pod	30
Setup Program Settings Save/Load/Restore	31
Setup System Diagnostics	31
Options Show Hints	31
Options Set Line Length	31
Options Set Font	31
Filtering Slave Address	32
Filtering Message Data	33
View Activity Chart	34
View Message Detail	34
View Byte Mode Viewer	35
View Address Alias Table	35
View Bus Status Viewer	36
Pop-Up Menu Controls:	36
Show Message Timing	37
Show Message Diagnostics	37
 Filename Convention:	 38

Limited Warranty

Micro Computer Control (MCC) Corporation warrants this product against defects in material and workmanship for a period of ninety (90) days from the original date of purchase.

This limited warranty is not applicable to:

1. Normal wear and tear.
2. Abuse, unreasonable use, mistreatment or neglect.
3. Damage caused by the equipment or system with which the product is used, or
4. Damage caused by modifications or repair not authorized by MCC.

THIS WARRANTY IS EXTENDED TO THE ORIGINAL PURCHASER ONLY AND IS IN LIEU OF ALL OTHER WARRANTIES, INCLUDING IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

In no event will MCC be liable for any incidental or consequential damages.

During the warranty period, MCC will repair, replace or refund the purchase price of any product found defective at its option. Returned items require an RMA (Return Material Authorization) issued by MCC, must be carefully packaged, insured for the full replacement value, with shipping charges prepaid, before the return will be accepted.

System Requirements

To use the I²C Bus Monitor Plus, your PC must meet the following requirements:

- Windows-based PC System.
- Pentium or compatible processor.
- 4 MB of RAM.
- 20 MB Free Hard Disk Space.
- CD Drive.
- Microsoft Windows (XP (x86), Vista and 7 (x86/x64)).
- Mouse.
- VGA or Better Monitor.
- Interface Card Slot (PCIe 1x, PCI, PC-CARD, or ISA).

System Components

The I²C Bus Monitor Plus package includes the following components:

1. I²C Bus Monitor Plus Pod.
2. Interface Card* (PCIe 1x, PCI, or PC-CARD, or ISA).
3. Computer Interface Cable.
4. I²C Bus Clip Lead Cable (2 foot) (#CABCL).
5. I²C Bus Cable (4 foot) (#CAB4).
6. BNC to Clip Lead Trigger Cable.
7. International Power Supply (#MWT-5VAG).
8. Interface Card Driver CD (InstaCal).
9. I²C Bus Monitor Plus Software CD.

*NOTE: PC-CARD and ISA not supported on Vista or 7.

I²C Bus Monitor Plus (#MIIC-102)



Introduction

The **I²C Bus Monitor Plus** (#MIIC-102) is a laboratory grade troubleshooting instrument for the Inter-Integrated Circuit (I²C) Bus developed by Philips Semiconductors. When connected to an I²C Bus and a host computer, the I²C Bus Monitor Plus captures and displays I²C Bus or derived bus protocol communications.

The complete I²C Bus Monitor Plus package consists of an external pod, interface card, connecting cables, and Windows based software.

Features

The I²C Bus Monitor Plus includes the following features:


- Non-intrusive trace of bus traffic to 400KHz.
- Compatible with low voltage logic.
- Microsecond time stamping on bus events and bit, byte, or message data.
- Captures Start/Stop events, device addresses, read/write requests, acknowledgments, and data.
- Display filtering on message Slave Address, R/W Access, Acknowledgment, and up to 8 data bytes.
- Log all bus activity to file.
- Log all displayed messages to a file.
- Trigger Input for synchronization with external event.
- Trigger Output on bus events or pattern match for triggering external test equipment.
- Smart Battery System (SBS) protocol display and violation detection.


I²C Bus Monitor Plus Software

MCC provides both Distribution and Demonstration/Viewer Editions of the I²C Bus Monitor Plus software.

The Distribution Edition of the software includes full support to capture and display bus messages. The Distribution Edition is distributed as an integral component of the I²C Bus Monitor Plus package.

The Demonstration/Viewer Edition of the software supports the display of bus messages previously recorded in I²C Bus Monitor Plus log files. The Demonstration/Viewer Edition of the software can be used to share log files with associates, and is available for free downloading from the MCC Web Site (www.mcc-us.com/BMPlusDemo.htm).

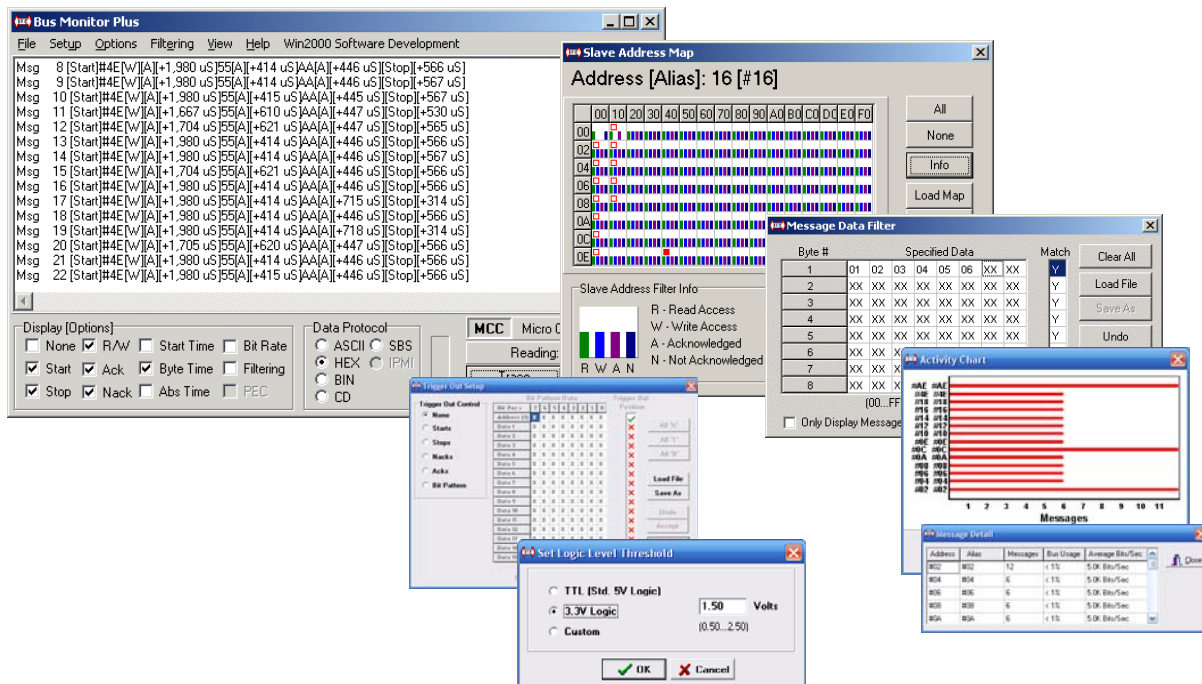

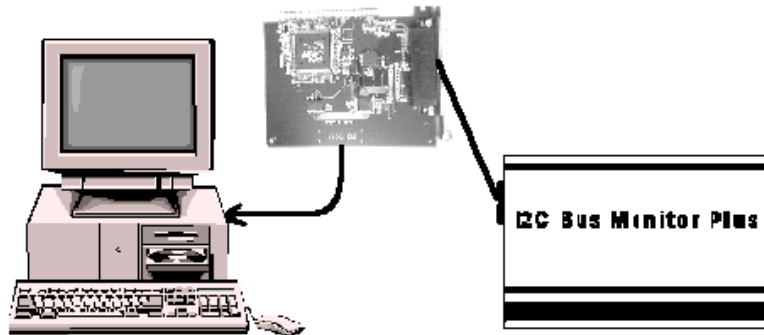

Installation

WARNING - The instructions that follow require certain technical skills in the field of computer electronics. If you feel that you are not qualified to perform the required setup and installation procedures, we recommend that you seek assistance from a qualified technician.

ESD (Electrostatic Discharge) Precautions

Electrostatic discharge is defined as the transfer of charge between bodies at different electrical potentials. Electrostatic discharge can change the electrical characteristics of a semiconductor device, degrading or destroying it. Electrostatic discharge also may upset the normal operation of an electronic system, causing equipment malfunction or failure.

When connecting the I²C Bus Monitor to a host computer and a target system, extreme care must be taken to avoid electrostatic discharge. Failure to follow ESD protection procedures when using the I²C Bus Monitor could damage the host computer, I²C Bus Monitor, or the target system, and void product warranty coverage.

Host Computer Grounding

Case 1 - Desktop and Single-board Computers. The chassis on a desktop or single-board host computer must be connected to earth ground to comply with safety regulations. If the computer chassis is NOT connected to earth ground for some reason (i.e., use of a two-prong power mains plug), the host computer power supply ground will float to some unknown voltage potential.

Case 2 - Laptop Computers. Laptop computers present special ESD problems. Most laptop computers use an external double-insulated mains power supply which is NOT connected to the mains earth ground. This means that the laptop chassis is floating at some unknown voltage potential.

In either case, upon connection to the I²C Bus Monitor and the target system, the host computer can discharge energy through its interface card to the I²C adapter, and on to the target system. This discharge could damage the host computer, I²C Bus Monitor, and the target system.

Grounding Solutions

To avoid damage to the host computer, I²C Bus Monitor, or target system, follow these instructions:

- Wear an earth grounded wrist strap, or discharge any static charge build-up, when handling the I²C Bus Monitor or any target system devices.
- Ensure that both the host computer and target system are connected to a common earth ground point.


- Make sure that all interconnections are made BEFORE applying power to the host computer, I²C Bus Monitor, and target system.
- If you are using a laptop computer or host computer that is NOT connected to mains earth ground, make a hard-wired connection from the host computer (i.e., port connector shell) and the target system ground connector to a common earth ground point.
- Avoid plugging and unplugging system components while the host computer or target system is powered.
- Ensure that any devices connected to the target system are properly grounded to the common earth ground point.
- If unsure how to properly ground system components, seek electrical expert help.

WARNING: Any damage caused by Electrostatic Discharge (ESD) through inadequate earth grounding is NOT covered under the warranty of this product.

Installation - PCI Express (PCIe) Interface Card Version

The following instructions apply to installing and configuring the PCI Express (PCIe) version of the I²C Bus Plus interface card in most PCs. Refer to the manual that accompanied your PC for detailed instructions on installing cards in your PC.

The I²C Bus Monitor Plus uses a PCIe-DIO24 PCI interface

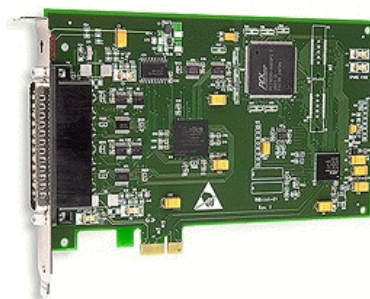

board and InstaCal driver software to access the external pod.

1. Installing the PCIe Card Driver Software

Insert the InstaCal CD you received with the I²C Bus Monitor Plus into your DVD/CD-ROM drive. If the driver installer does not start automatically, double-click on the installer (icalsetup.exe) on the CD to begin the installation. Install the InstaCal software by following the instructions on screen.

NOTE: Once the InstaCal driver software is installed, you must restart your computer to complete the installation.


2. Installing the PCIe Card and Driver

This board is completely plug and play capable. To install the interface board:

1. Following instructions provided with your computer, turn your computer off, unplug the power, open the case, and insert the PCIe-DIO24 board into an available PCI-e slot.
2. Close your computer case, plug in power, and turn it on.
3. Windows will automatically detect the board as it starts up and will install the driver software.


3. Configuring the PCIe Card

Configure your interface board by running the InstaCal program via the Start|Programs|Measurement Computing|InstaCal menu. InstaCal will automatically detect the new board. Follow the instructions on screen to complete the board configuration and testing.

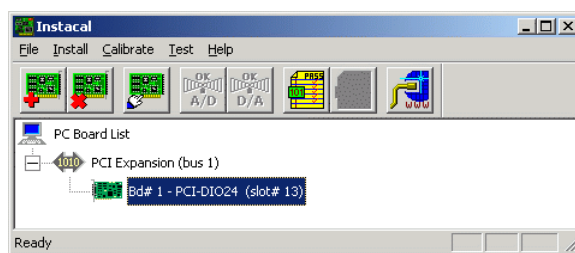

Installation - PCI Interface Card Version

The following instructions apply to installing and configuring the PCI version of the I²C Bus Plus interface card in most PCs. Refer to the manual that accompanied your PC for detailed instructions on installing cards in your PC.

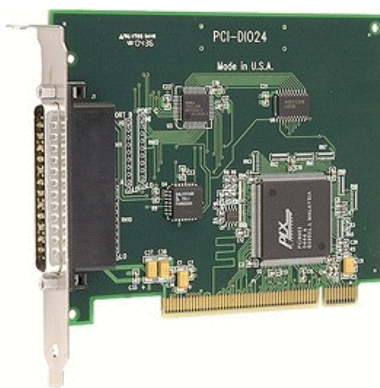

The I²C Bus Monitor Plus uses a PCI-DIO24 PCI interface board and InstaCal driver software to access the external pod.

1. Installing the PCI Card Driver Software

Insert the InstaCal CD you received with the I²C Bus Monitor Plus into your DVD/CD-ROM drive. If the driver installer does not start automatically, double-click on the installer (icalsetup.exe) on the CD to begin the installation.. Install the InstaCal software by following the instructions on screen.

NOTE: Once the InstaCal driver software is installed, you must

restart your computer to complete the installation.


2. Installing the PCI Card and Driver

This board is completely plug and play capable. To install the interface board:

4. Following instructions provided with your computer, turn your computer off, unplug the power, open the case, and insert the PCI-DIO24 board into an available PCI slot.
5. Close your computer up, plug in power, and turn it on.
6. Windows will automatically detect the board as it starts up and will install the driver software.

3. Configuring the PCI Card

Configure your interface board by running the InstaCal program via the Start|Programs|Measurement Computing|InstaCal menu. InstaCal will automatically detect the new board. Follow the instructions on screen to complete the board configuration and testing.

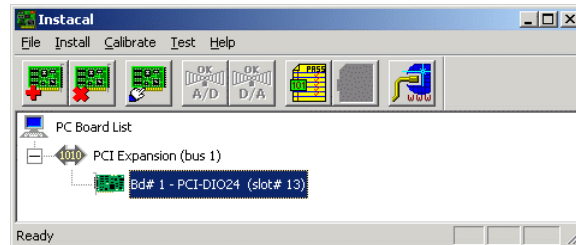

Installation - PC-CARD Interface Version (XP x86 ONLY)

The following instructions apply to installing and configuring the PC-CARD version of the I²C Bus Plus interface card in most PCs. Refer to the manual that accompanied your PC for detailed instructions on installing PC-CARDS in your PC.



The I²C Bus Monitor Plus uses a PC-CARD-D24CTR3 interface board and InstaCal driver software to access the external pod.

1. Installing the PC-CARD Driver Software

Insert the InstaCal CD you received with the I²C Bus Monitor Plus into your DVD/CD-ROM drive. If the driver installer does not start automatically, double-click on the installer (icalsetup.exe) on the CD to begin the installation. Install the InstaCal software by following the instructions on screen.

NOTE: Once the InstaCal software is installed, you must restart your computer to complete the installation.


2. Installing the PC-CARD and Driver

This board is completely plug and play capable. To install the interface board:

1. Insert the PC-CARD-D24CTR3 board into any available PC-CARD slot.
2. Windows will automatically detect the board as it is inserted and will install the driver software.

3. Configuring the PC-CARD

Configure your interface board by running the InstaCal program via the Start|Programs|Measurement Computing|InstaCal menu. InstaCal will automatically detect the new board. Follow the instructions on screen to complete the board configuration and testing.

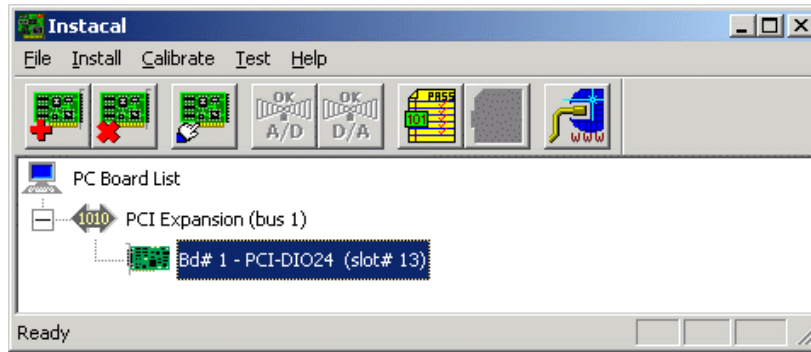

Installation - ISA Interface Card Version (XP x86 ONLY)

The following instructions apply to installing and configuring the ISA version of the I²C Bus Plus interface card in most PCs. Refer to the manual that accompanied your PC for detailed instructions on installing cards in your PC.

The I²C Bus Monitor Plus uses a CIO-DIO24 ISA interface board and InstaCal driver software to access the external pod.



1. Installing the ISA Card Configuration Software

Insert the InstaCal CD you received with the I²C Bus Monitor Plus into your DVD/CD-ROM drive. If the driver installer does not start automatically, double-click on the installer (icalsetup.exe) on the CD to begin the installation. Install the InstaCal software by following the instructions on screen.

NOTE: Once the InstaCal software is installed, you must restart your computer to complete the installation.

2. Setting ISA Card Address

Each ISA I/O card installed in a PC uses one or more I/O address locations within your computer's I/O address space. These address locations are used by software running on the PC's processor in communicating with electronics on the card.


In order to not interfere with other installed cards in the PC, each card must use unique addresses. The interface card address determines the card's location within your computer's I/O address space.

Certain I/O addresses are used by the PC, others are free and may be used by the interface card. Refer to the manual that accompanied your PC for information regarding available address location in your PC.

The CIO-DIO24 ISA interface card uses 4 consecutive addresses starting with the base address selected with the ADDRESS switch on interface card . The factory default setting for the interface card is 300H. We recommend the default factory setting be tried first.

The ADDRESS switch may be set for addresses in the range of 000H to 3FCH. It should not be hard to find a free address area for the card in your PC. Addresses 300H to 31FH are a prototype card area, and is often available for add-in cards. Addresses 390H to 39F may also be available.

The InstaCal software provides a graphical representation of ADDRESS switch settings. We recommend that you install and run InstaCal software before installing the interface card in your PC.

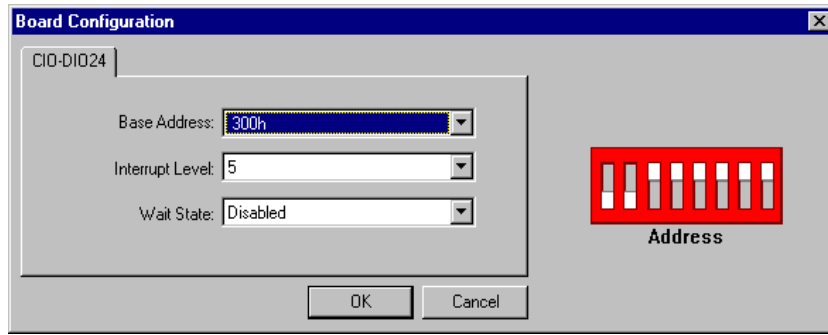


3. Installing the ISA Card

To install the interface board:

1. Following instructions provided with your computer, turn your computer off, unplug the power, open the case, and insert the CIO-DIO24 board into any available ISA slot.
2. Close your computer case, plug in power, and turn it on.

4. Configuring the ISA Card

Configure your interface board by running the InstaCal program via the Start|Programs|Measurement Computing|InstaCal menu. InstaCal will automatically detect the new board. Follow the instructions on screen to complete the board configuration and testing.

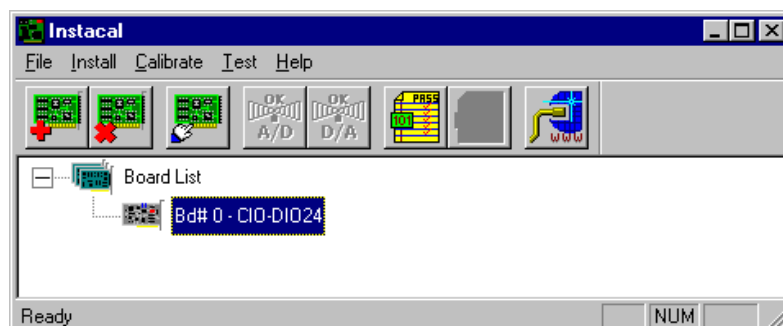

Installing - I²C Bus Monitor Plus Software

This section covers software installation procedures for the both the Distribution and Demonstration/Viewer Editions of the I²C Bus Monitor Plus software.

Installing - Distribution Edition

The Distribution Edition of the I²C Bus Monitor Plus software includes full support to capture and display bus messages. This version of the software is distributed as a component of the I²C Bus Monitor Plus package.

To install the Distribution Edition:

1. Insert the I²C Bus Monitor Plus software distribution CD into your CD drive.
2. The installation should start automatically. If it does not start, use the Windows Explorer to double-click Setup.exe file on the distribution CD.
3. Follow the instructions presented on screen.

Installing - Demonstration/Viewer Edition


The Demonstration Edition of the I²C Bus Monitor Plus software supports the display of bus messages previously recorded in log files. This edition of the software can be used to become familiar with I²C Bus Monitor Plus features, or to view bus message log files captured by users of the Distribution Edition of the software.

To install the Demonstration/Viewer Edition:

Download the Demonstration/Viewer Edition of the software from the MCC web site (www.mcc-us.com/BMPlusDemo.htm). Follow the instructions on screen.

Connecting Your PC to the Pod

The I²C Bus Monitor Plus pod contains the electronic circuitry required to capture and record bus events, and communicate these events with the interface card and software installed in your PC.

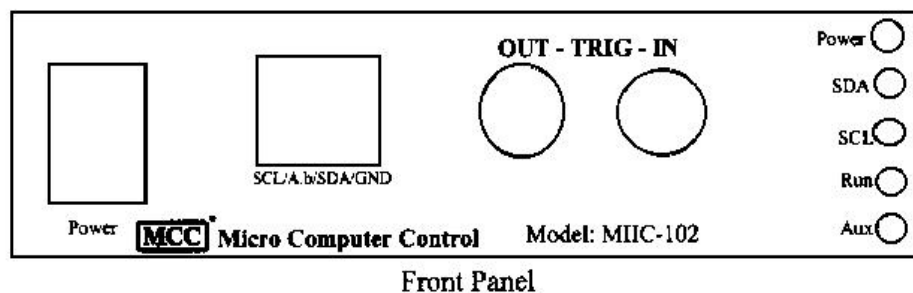

This section describes how to connect your PC to the I²C Bus Monitor Plus pod.

1. Connect the previously installed interface card to the DB-37 connector at the rear of the I²C Bus Monitor Plus pod using the interfacing cable provided.
2. Connect the included regulated 5VDC power supply cable to the power connector on the rear of the pod.
3. Plug the power supply into a 120/240VAC 50/60Hz outlet.
4. Turn the pod power on. The red power light on the front of the pod should illuminate.
5. To test the pod connection to your PC, run the I²C Bus Monitor Plus Software described below and select

"Setup|Initialize External Pod" from the main menu. When pod initialization is complete, the Run light on the front of the pod will blink.

The pod is now ready to be connected to the system under test and optionally to external test equipment. Proceed to the next section, "Connecting to the System Under Test".

Connecting to the System Under Test


The I²C Bus Monitor Plus pod includes several ports for connecting the pod to a system under test. These ports include:

1. I²C Bus Port



The I²C Bus port is used to connect the pod to the I²C Bus under test. This port is located on the front of the pod, and uses an AMP Shrouded Data Link type connector. Input lines are provided for I²C Clock, Data, and Ground, and optional System Under Test Vcc voltage measurement.

Connect the pod to the I²C Bus under test using the I²C Bus clip lead cable or I²C Bus cable provided.

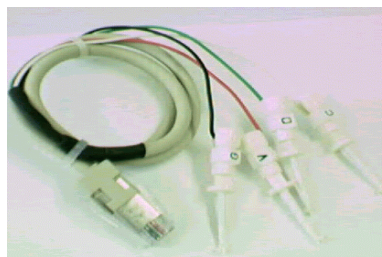


2. Trigger In Port



The Trigger In port is optionally used to synchronize I²C Bus data collection with an external event. This port is located on the front of the pod, and uses a BNC type connector. Input lines are provided for signal and ground.

When Trigger In is enabled with the software Trace Control dialog, data capture begins on the first I²C Bus Start condition after a high to low transition on the Trigger In signal line.


Connect the pod to an external trigger circuit using the BNC to clip lead cable provided.

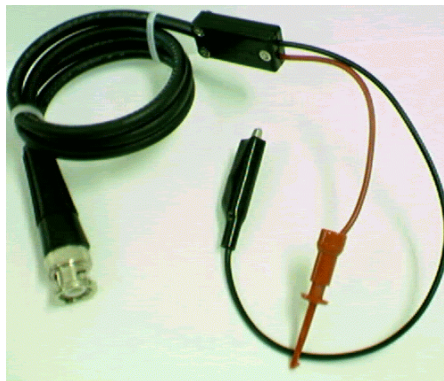

Connecting to External Test Equipment (Optional)

The I²C Bus Monitor Plus pod includes two ports for connecting the pod to external test equipment. These ports include:

1. Trigger Out Port

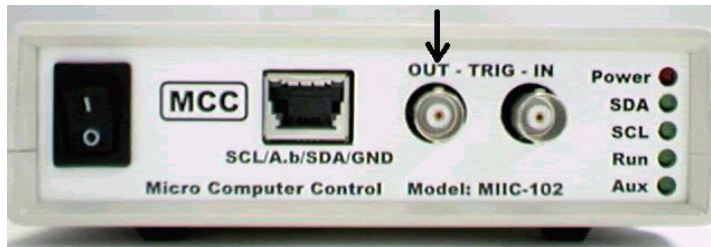

The Trigger Out port is optionally used to synchronize external equipment with I²C Bus events or data match pattern. This port is located on the front of the pod, and uses a BNC type connector. Output lines are provided for signal and ground.

When Trigger Out is enabled and configured with the software Trigger Out dialog, a high to low transition on the signal line occurs on:

- a. I²C Bus Start events.
- b. I²C Bus Stop events.
- c. I²C Bus Acknowledge event.
- d. I²C Bus Negative Acknowledge event.
- e. Bit Pattern Match.

Connect the pod to external equipment using a BNC to external equipment cable (not provided).

2. Auxiliary Port (optional)



The Auxiliary port is used to connect the I²C Bus Monitor pod to external equipment. This port is located on the rear of the pod, and uses a DB-9M type connector. Auxiliary lines include:

Pin 1 - I²C Bus Data (SDA)
Pin 2 - I²C Bus Clock (SCL)
Pin 3 - TTL I²C Bus Clock (TSCL)
Pin 4 - TTL I²C Bus Data (TSDA)
Pin 5 - Ground (GND)
Pin 6 - Trigger Out (TOUT)
Pin 7 - Trigger In (TIN)
Pin 8 - Optional I/O (OIO)
Pin 9 - Vcc +5 Output (VOUT)

Starting the I²C Bus Monitor Plus Software

The best way to get familiar with the I²C Bus Monitor Plus software is to start it up.

Even without the interface card installed or external pod connected, you can exercise various product features by loading one of the sample log files included with the product.

Viewing Sample Log Files


1. From the Windows Start menu, select Programs|I²C Bus Monitor Plus x.x|I²C Bus Monitor Plus.
2. When using the Demonstration/Viewer Edition of the software, use Windows Explorer to click on the BMPlus32Demo.exe file downloaded from the MCC web site.
3. Select "Open Log File for Read" in the "Setup" menu, and select a pre-recorded log file. Click "Trace" to view pre-recorded bus messages.

Viewing Live Messages

1. Install the I²C Bus Monitor Plus software and hardware as indicated in the Installation section of this user's guide.
2. From the Windows Start menu, select Programs|I²C Bus Monitor Plus x.x|I²C Bus Monitor Plus.
3. Select the desired Display (Options) and Data Protocol. Click "Trace", and follow the instructions on screen. Any active bus messages will be displayed with your options.

Program Controls

The I²C Bus Monitor Plus software provides a rich set of features designed to collect, time-stamp, analyze, and display I²C Bus messages. User control of these features is provided by a graphical user interface consisting of Trace Controls, Display Options, Data Protocol selections, Pull-Down Menus, and Pop-Up Menus.

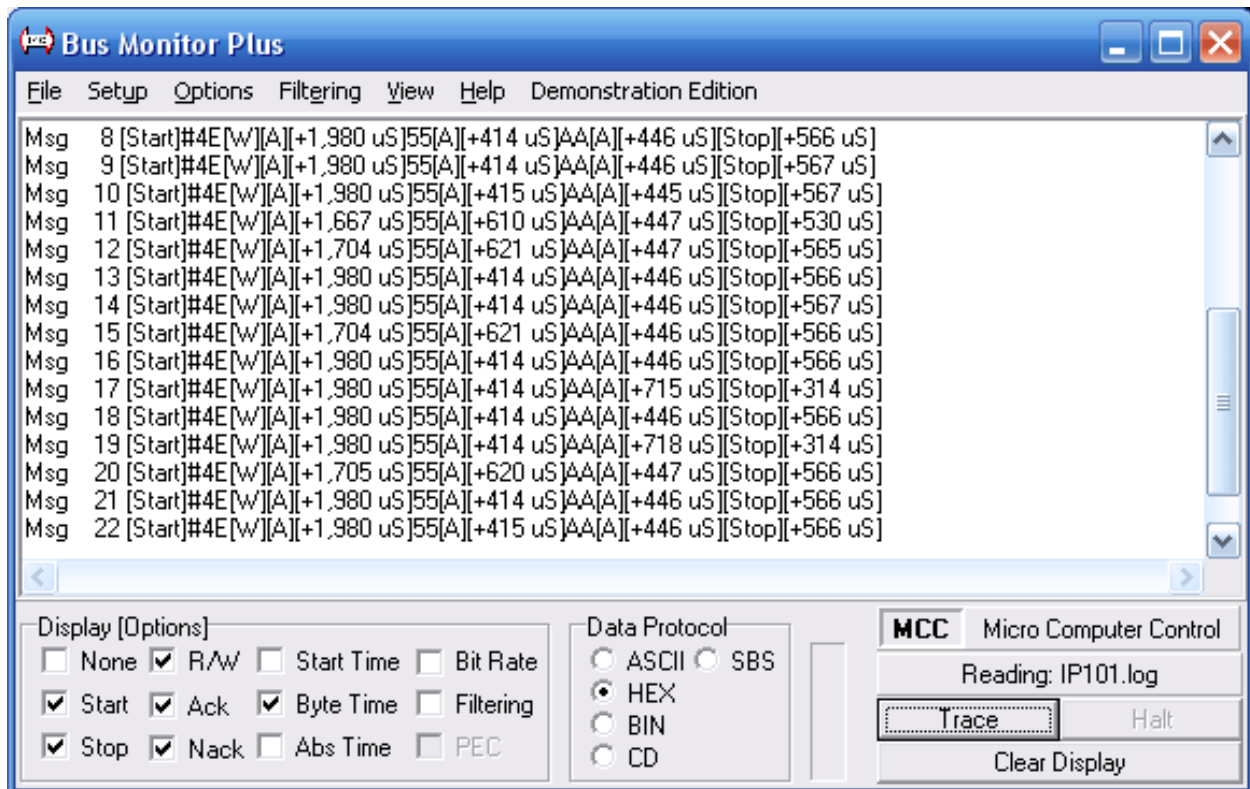

Main Screen - HEX Data Protocol

The operation of these controls are described below:

Trace Controls:

Trace - Enter Trace mode. The Bus Monitor Plus displays I²C Bus traffic or log file data using the selected display format and filtering in the main display window. If a log file is Open for Read, log data will be displayed.

More - Continue display of log file data when main display is full.

Halt - Stop display of data and enter Halt mode.

Clear - Clear the main display window.

Display [Options]

None - Disables all message parsing and display activities. Use this option along with “Open Log File for Write” to maximize pod recording memory utilization.

Start, Stop, Ack, NAck and R/W - Controls display of I²C events.

Start Time, Byte Time, and Bit Rate - Controls display of message timing information.

Filtering - Enables Slave Address and Message Data filtering. See Address Map dialog and Message Data dialog for information on establishing filtering parameters.

Abs Time - Message Start, Byte, and Bit timing can be displayed in Relative Time or Absolute Time mode.

Relative Time Mode

Relative Mode displays timing information relative to the previous I²C Bus event. Displayed Start timing is the time since the previous Stop. Displayed Byte or Bit timing is the time since the previous Start, Byte, or Bit event.

Absolute Time Mode

Absolute Mode displays timing information from a fixed I²C Bus event. Displayed Start timing is the time since the first I²C Bus Start event. Displayed Byte or Bit timing is the time since the current message I²C Bus Start event.

Data Protocols

Captured message data can be displayed using several standard protocols. These protocols include:


ASCII - Display printable data in ASCII format.

HEX - Display data in Hexadecimal format.

BIN - Display data in Binary format. (*New for V2.3*)

CD - Display data in Comma Delimited format. (*New for V2.3*)

SBS - Display SBS data in Smart Battery System format.

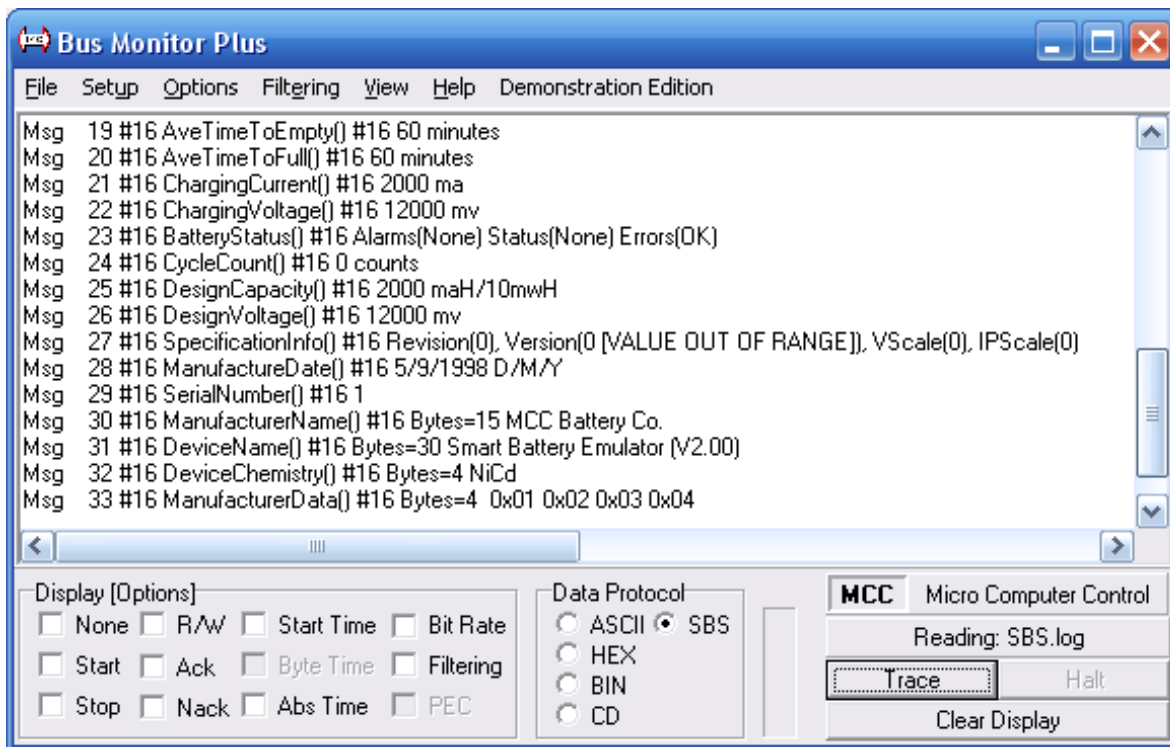

Main Screen - Smart Battery System Protocol


Pull-Down Menu Controls:

File|Print Setup - Setup printer.


File|Print - Print Displayed Data with option to print selected text only.

File|Exit - Terminate program.


Setup|Interface Board - Displays the Interface Board dialog box. Use the Interface Board dialog box to select the interface board connected to the external pod.

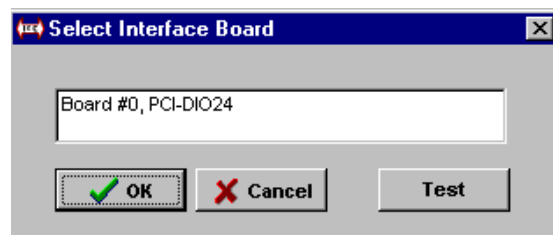

Setup|Logic Level Threshold - Displays the Logic Level Threshold dialog box. Use the Logic Level Threshold dialog box to set the logic level threshold on the I²C Clock and Data lines. Logic levels for TTL (5V Logic), 3.3V Logic, and Custom levels for 0.50V to 2.50V are supported.

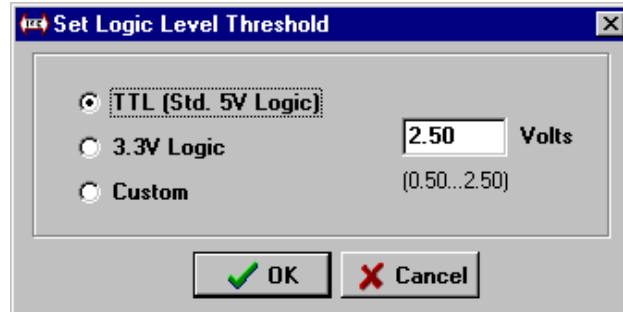


Setup|Trace Control - Displays the Trace Control dialog box. Use the Trace Control dialog box to set Trace start conditions.

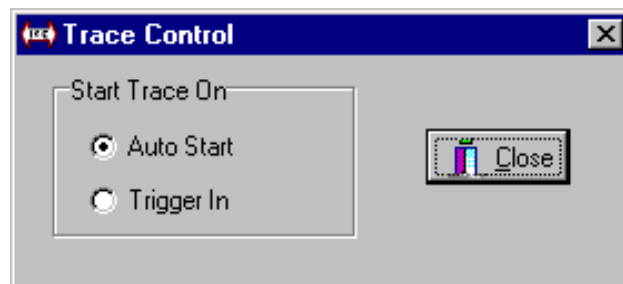

Select "Auto Start" to start tracing messages on the first I²C Bus Start event.

Select "Trigger In" to start tracing messages on the first I²C Bus Start event after the Trigger In port goes low. Use this setting to synchronize data collection with external signals.

Setup|Trigger Out - Displays the Trigger Out dialog box. Use the Trigger Out dialog box to set Trigger Out port low pulse conditions.

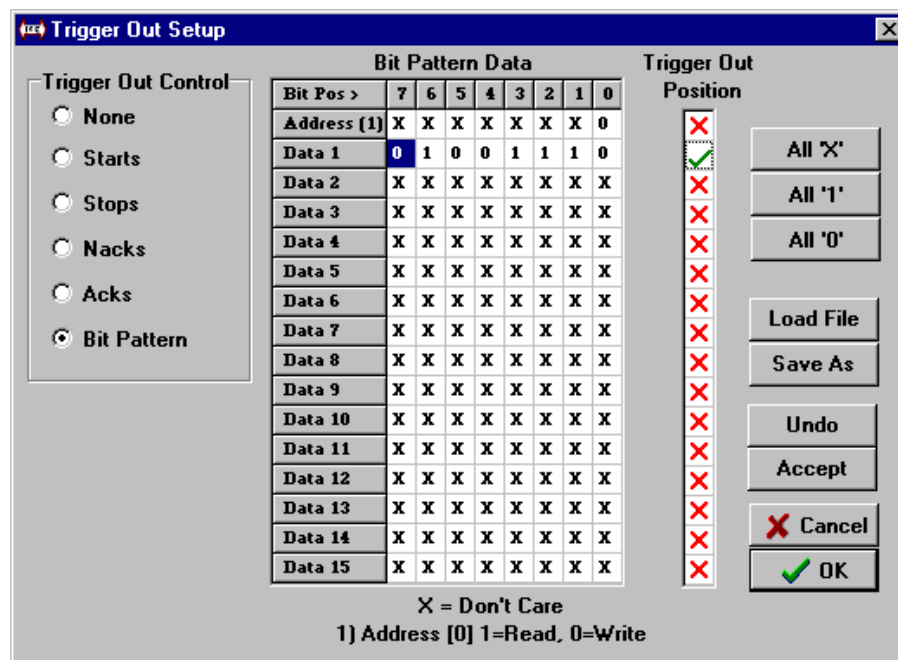

Select "Start", "Stop", "Ack", or "Nack" to generate a low pulse on the Trigger Out port each time the selected I²C Bus event occurs.

Select "Bit Pattern" to generate a low pulse on the Trigger Out port when the Bit Pattern Data match and Trigger Out Position conditions occurs.

Bit Pattern data and Trigger Position selection is provided for the I²C Bus address and first 15 data bytes within a message. Bits may be specified as 0, 1, or Don't Care.


The Trigger Out port low pulse occurs if the Bit Pattern match is true when the Trigger Out position occurs. Trigger Out low pulse occurs on the I²C Bus Acknowledge bit following the Trigger Out position byte.

The Trigger Out signal can be used to synchronize external data collection devices such as storage scopes or logic analyzers with I²C Bus events.

Setup|Enable Bit Timing - Enable collection of I²C Bus Bit Timing information. Bit timing information is available in the "Show Message Timing" pop-up menu described below.

Bit Timing causes the external pod to generate a 9 times increase in data, and can result in pod data recording memory overflow on high bandwidth or high speed bus traffic.

Setup|Select SBS Revision - Displays the Smart Battery System (SBS) Revision dialog box.

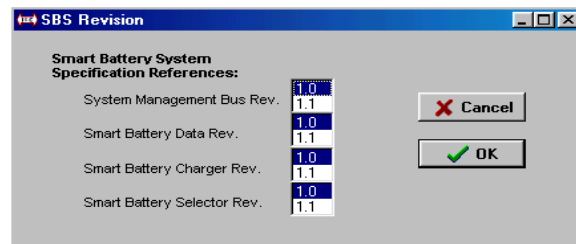

Use this dialog box to select the SBS revision used by system components. When displaying messages in SBS protocol, the I²C Bus Monitor Plus software will detect and display the following protocol violations using the selected specification revision.

SBS Protocol violation detection includes:

- [VALUE RANGE VIOLATION]
- [STRING LENGTH < MINIMUM]
- [STRING LENGTH > MAXIMUM]
- [BLOCK LENGTH < MINIMUM]
- [BLOCK LENGTH > MAXIMUM]
- [RESERVED BIT VIOLATION 0xXXXX]
- [NO CHARGER ALARM VIOLATION]
- [NO HOST ALARM VIOLATION]
- [INVALID ERROR CODE 0xXXXX]
- [RESERVED ERROR CODE 0xXXXX]
- [RESERVED VALUE VIOLATION 0xXXXX]
- [VALUE VIOLATION 0xXXXX]

[SINGLE BIT VIOLATION 0xFFFF]
[SLAVE ADDRESS NACK]
[0xFF RESERVED FUNCTION]
[READ ONLY ACCESS VIOLATION]
[PEC=XX CRC=XX ERR]
[PEC ACK ERROR]
[PEC NACK ERROR]
[MSG TOO LONG]
[WRITE ONLY ACCESS VIOLATION]
[UNINITIALIZED READ OPERATION]
[MSG BYTES MISSING]
[INVALID REPEATED START ADDRESS]
[ALERT RESPONSE READ ONLY ACCESS VIOLATION]

For details on the SBS protocol, visit the Smart Battery Implementors Forum at www.sbs-forum.org

Setup|Open Log File for Write - Open a log file (*.log) to record data from I²C Bus Monitor Plus pod. Recorded log files can be displayed with the Setup|Open Log File for Read menu item below.

Setup|Open Log File for Read - Load a previously stored file for processing and display. The I²C Bus Monitor Plus can display log files (*.log) previously collected from the external pod. Log files are displayed with the currently selected display, filtering and protocol options.

Setup|Open Display File for Write - Open a text file to record all displayed messages. Use in combination with the Comma Delimited data protocol option to generate comma delimited files suitable for importing into a spreadsheet program for additional analysis. (*New for V2.3*)

Setup|Initialize External Pod - Select Initialize External Pod to initialize or re-initialize the I²C Bus Monitor Plus external pod. Initialization also automatically occurs when performing activities

that require the pod.

Setup|Program Settings|Save/Load/Restore Default - Select this menu item to Save, Load, or Restore Default I²C Bus Monitor Plus software parameters.


Setup|System Diagnostics - Select System Diagnostics display system diagnostic data used for product support.

Options|Show Hints - Enable display of cursor sensitive help.

Options|Set Line Length - Set display line length for message wrap.

Options|Set Font - Select display font and size.

Filtering|Slave Address - Displays the Slave Address Map dialog box. (*New for V2.3*)

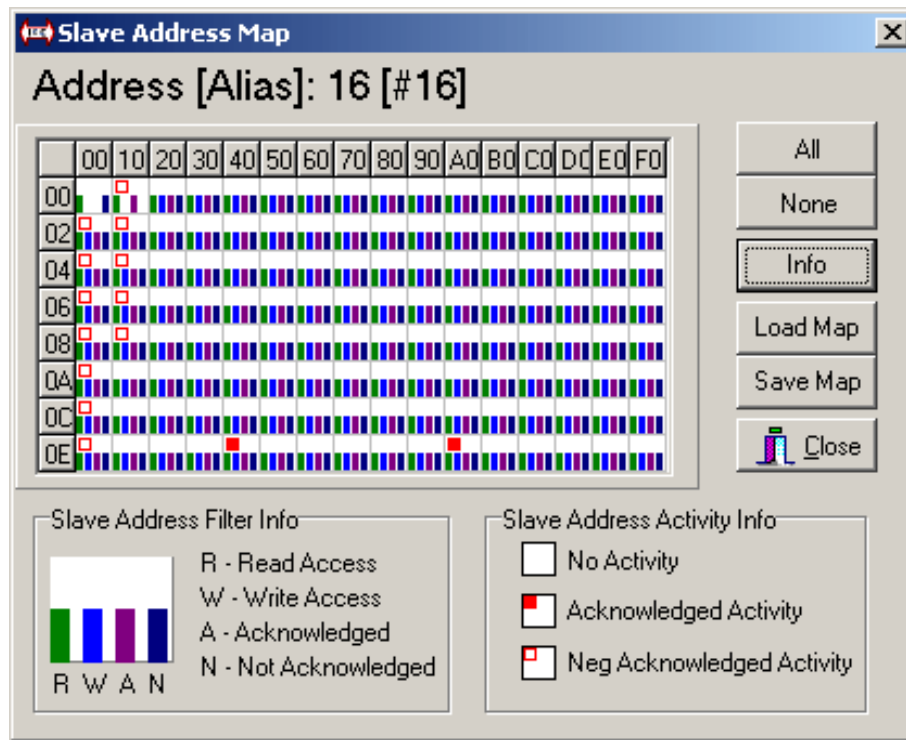


Use the Slave Address Map dialog box to select I²C messages to display by Slave Address, Read/Write Access, and Slave Device Acknowledgment, and to globally monitor all address activity.

Click on grid cells to access Slave Address Filter editor.

Slave Address Activity Info shows acknowledged bus messages with a solid dot. Negative acknowledged bus messages with a hollow dot. Selecting a grid cell clears the activity indicator.

Slave Address Map display filtering is enabled with the Filtering check box on the main screen.

Filtering|Message Data - Displays the Message Data Filter dialog box. (*New for V2.3*)

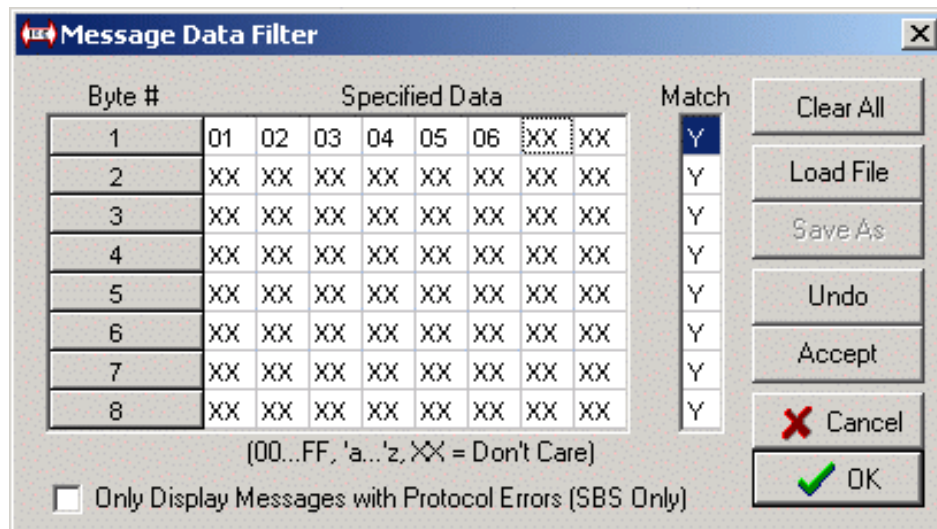


Use the Message Data Filter dialog box to select I²C messages to display by data content and by protocol error detection.

Click on a grid cell to enter match data in hexadecimal digits (00...FF), ASCII codes (i.e. 'a' for the letter a), or XX for don't care. Enter up to 8 match data per message byte. Click “Match” to display message on Match (Y) or Non-Match (N) condition.

Check the Protocol Error checkbox to display only messages with detected Smart Battery System (SBS) protocol errors for the currently selected SBS specification revision.

Message Data display filtering is enabled with the Filtering check box on the main screen.

View|Activity Chart - Displays the Activity Chart dialog box.

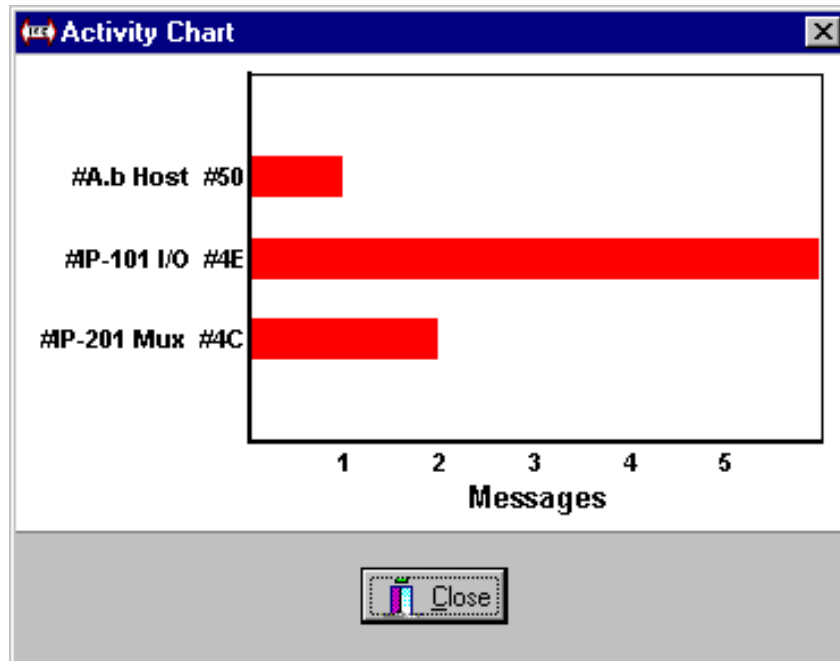

Use the Activity Chart dialog box to display a bar chart of message activity for the top 16 most frequently used slave addresses.


View|Message Detail - Displays the Message Detail dialog box.

The Message Detail dialog box displays a table of message activity for all active slave addresses. The table has five columns: Address, Alias, Messages, Bus Usage, and Average Bits/Sec. The data is as follows:

Address	Alias	Messages	Bus Usage	Average Bits/Sec
#4C	#IP-201 Mux	2	< 1%	4.0K Bits/Sec
#4E	#IP-101 I/O	6	< 1%	8.1K Bits/Sec
#50	#A.b Host	1	< 1%	3.9K Bits/Sec
Idle	--	--	> 99%	--

Use the Message Detail dialog box to display a report of message activity for all active slave addresses.


View|Byte Mode Viewer - Displays the Byte Mode Viewer.

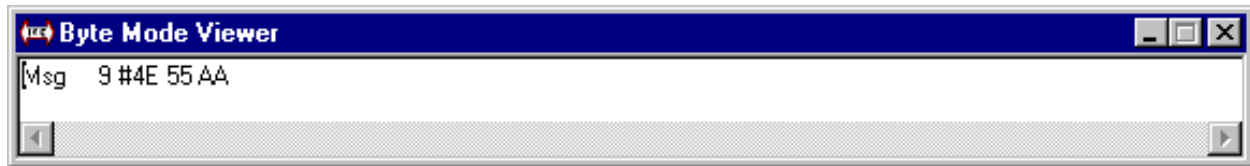

The main message screen displays filtered I²C messages upon detecting an I²C Bus STOP event at end of message.

The Byte Mode Viewer displays unfiltered I²C Bus events as they cross the bus, displaying message data even if the bus stalls within a message.


View|Address Alias Table - Displays the Address Alias Table dialog box.

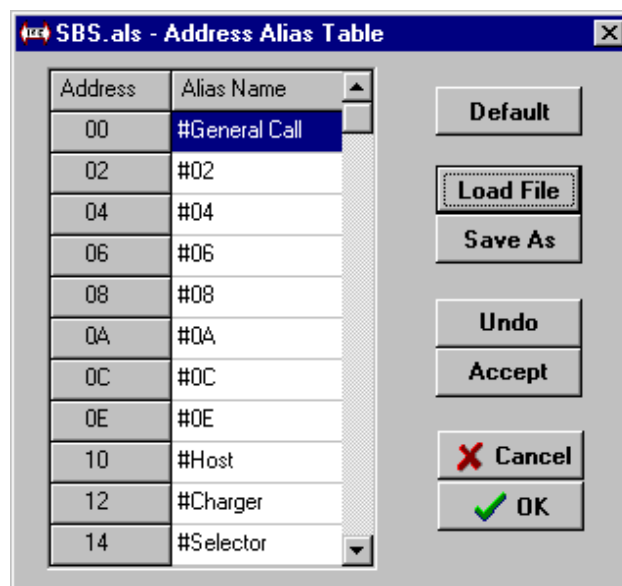

Use the Address Alias Table dialog box to specify an alias name for slave addresses. Alias names are used to customize the display of slave addresses.

View|Bus Status Viewer - Displays the Bus Status Viewer dialog

box.

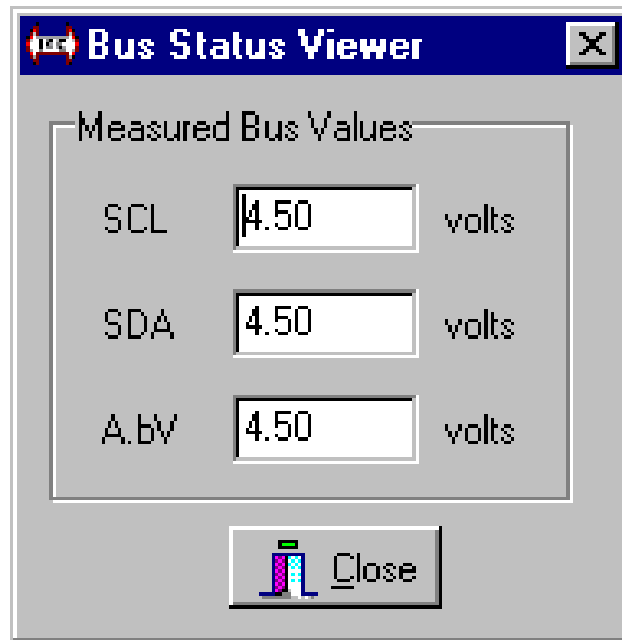

Use the Bus Status Viewer dialog box to view the current voltage levels on the I²C Bus Clock, Data, and A.bV lines. This viewer is useful in determining if the Clock or Data lines are stuck low.


Pop-Up Menu Controls:

The Pop-Up Menu is used to view details on a specific displayed message. This menu is available on the main screen when displayed I²C Bus messages are present and the system is in Halt mode.

To access the Pop-Up Menu, left mouse click to select a message, then right mouse click to pop-up the menu. Left mouse click to select a menu item.

Show Message Timing

Select the Message Timing menu item to display timing information on the currently selected message. I²C Bus Start/Stop events and Data bytes are displayed. Bit timing data is displayed if "Enable Bit Timing" (see Setup Menu) was enabled when the message data was collected.

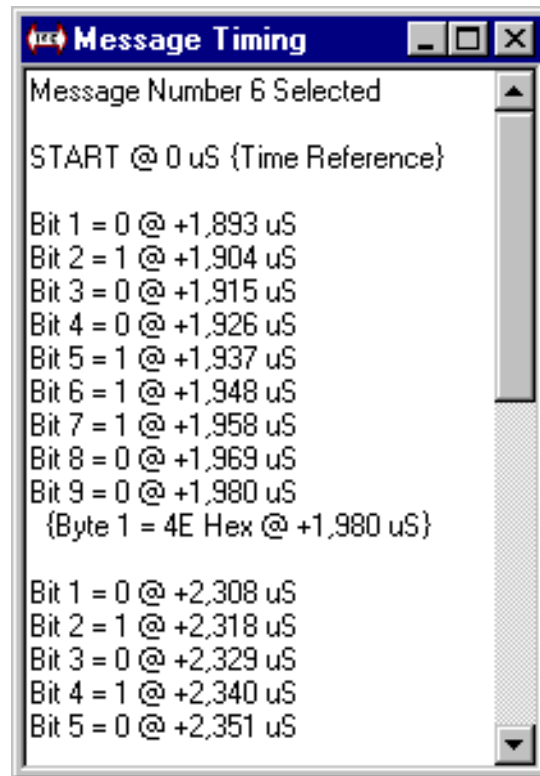

Show Message Diagnostics

Select the Message Diagnostics menu item to display diagnostic data used for product support.

Filename Convention:

The I²C Bus Monitor Plus uses a variety of file types to save or record information. These file types include:

- *.als Address Alias Table File - This file type is used to save Slave Address name aliasing information.
- *.bps Setup File - This file is used to save software setup parameters.
- *.dmf Data Match File - This file type is used to save Message Filter match data.
- *.log Log File - This file type is used to record data packets from the external pod.
- *.map Slave Address Map File - This file type is used to save Slave Address Map filter information.
- *.pod Pod Configuration File - This file contains pod configuration data.
- *.trg Trigger Out File - This file type is used to store Trigger Out setup information.

Direct Comments/Feedback to:

Attn: Product Support (#MIIC-102)
Micro Computer Control Corporation
P.O. Box 275
Hopewell, NJ 08525 USA

Voice - (609) 466-1751

Fax - (609) 466-4116

Email - info@mcc-us.com

WWW - <http://www.mcc-us.com>

Declaration of Conformity

This Declaration of Conformity is issued by the indicated company which is solely responsible for the declared compliance.

Product: I2C/SMBus Monitor Plus
Product Part Number: MIIC-102
Product Description: I2C/SMBus Monitor

Applicable Directive(s): EC Directive 89/336/EEC

Compliant Standards:
EN 55022 : 1998
Emissions Standard
Conducted Emissions (Class B)
Radiated Emissions (Class B)

EN 55024 : 1998
Immunity Standard
Immunity to Radiated Electromagnetic Fields
Immunity to Fast Transient Bursts - AC Power Lines
Immunity to Conducted Field - AC Power Lines
Immunity to Voltage Dips - AC Power Lines
Immunity to Electrostatic Discharge

Test Laboratory Information:
Cass Industries Ltd., Blackbrook Trading Estate, Weybrook Road, Manchester M19 2QD,
ENGLAND.

Test Report Number: CI02486c
Test Report Date: April 27th, 2005
Technical file held by: Micro Computer Control Corporation, 83 Princeton Avenue / PO
Box 275, Hopewell, New Jersey 08525 USA, or its applicable authorized distributor or
representative.

Responsible Company: Micro Computer Control Corporation, 83 Princeton Avenue / PO
Box 275, Hopewell, New Jersey 08525 USA, or its applicable authorized distributor or
representative.

Signature of Authorized Representative:

Edward Thompson

Name: Edward Thompson
Title: President, Micro Computer Control Corporation
Date: 13-DEC-10